


1.0 GENERAL


The unit is a highly accurate and stable digital process indicator that accepts all commonly used process signals. The unit can be used "stand alone" or, with the Modbus serial communications pod option, as part of a larger system.

The case design enables option Pods to be easily installed without the need for dismantling or re-calibration. A range of Pods are available for:

- Relay outputs
- Isolated 4-20 mA re-transmission
- Modbus serial communication.

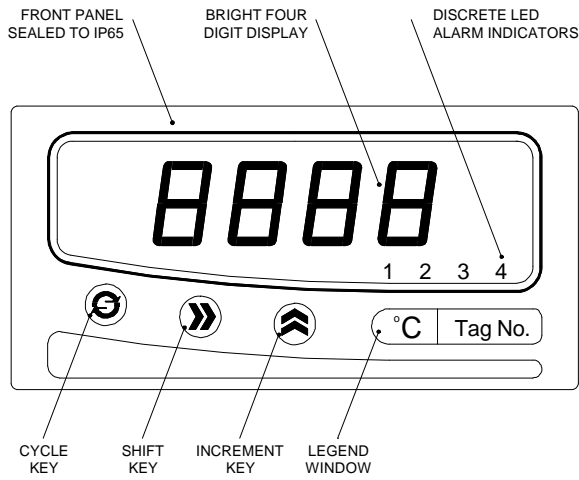

The diagram shows the rear panel positions for all electrical connections.

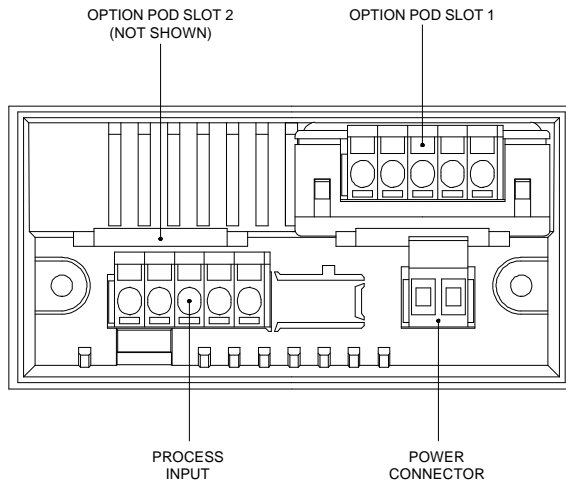

2.0 UNPACKING

Please inspect the instrument carefully for any signs of shipping damage. The packaging has been designed to afford maximum protection, however, we cannot guarantee that mishandling will not have damaged the instrument. In the case of this unlikely event, please contact your supplier immediately and retain the packaging for subsequent inspection.


3.0 INSTALLATION

THIS SECTION FOR USE BY COMPETENT PERSONNEL ONLY

3.1 Safety Information

- **WARNING** READ SAFETY INFORMATION BELOW BEFORE INSTALLATION
- **WARNING** Hazardous voltages may be present on the terminals - the equipment must be installed by suitably qualified personnel and mounted in an enclosure providing protection to at least IP20.
- **ISOLATION** The power supply terminals and associated internal circuitry are isolated from all other parts of the equipment in accordance with BS EN61010-1 for connection to a Category II supply (pollution degree 2)
Functional isolation (500v max) is provided between input and output circuits, and between inputs and communications (where fitted).
Any terminals or wiring connected to the input, output or communications terminals which are **accessible in normal operation** must **ONLY** be connected to signals complying with the requirements for **Safety extra low voltage (SELV)** circuits.
- **WARNING** If not installed in accordance with these instructions, protection against electrical hazards may be impaired.
- Installation overvoltage category - 2 (as per BS EN61010-1)
- The Mains supply to the equipment must be protected by an external 1 Amp fuse and a suitable switch or circuit breaker which should be near the equipment.
- The equipment contains no user serviceable parts.

3.2 Installing Into a Panel

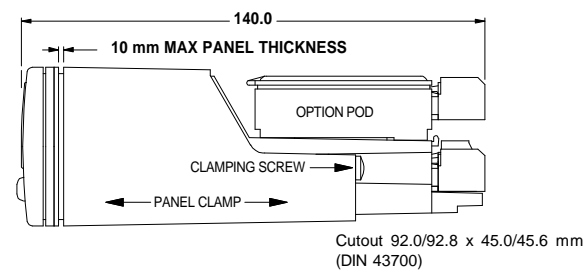

Refer to section 8.0 for Mechanical Detail.

The maximum panel thickness is 10mm. The instrument case has an integral gasket which forms a seal when the instrument is tightened against the panel. The panel should be clean, smooth and at least 1.6mm thick for the seal to be effective.

- **WARNING** Use only the retaining screws provided to clamp the instrument to the panel (screws must be tightened sufficiently to effect a seal but **must never be overtightened**).

3.3 Wiring


All connections are made to sockets which are removable for ease of maintenance.

Installation should be undertaken in accordance with relevant sections of BS6739 - British Standards code of practice for "Instrumentation in Process Control Systems: Installation design and practice".

3.4 Power Supply

The Power supply rating will be indicated on the top of the instrument, ensure it is correct for the application.

The Mains supply to the equipment must be protected by an external 1 Amp fuse and a suitable switch or circuit breaker which should be near the equipment.

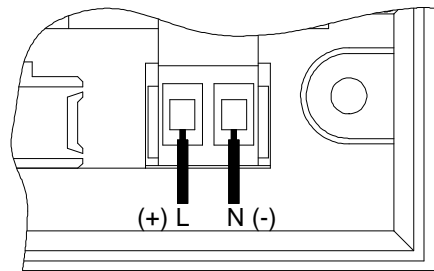


Wires are retained by screws. Ensure that the exposed section of the wire is fully inserted and that no loose strands are exposed.

3.5 Sensor Connections

All sensor connections are made via the five way "fast wiring" socket at the rear of the unit (wire size 0.5 to 1.5mm²).

3.5.1 Current Measurement of an Internally Powered Loop

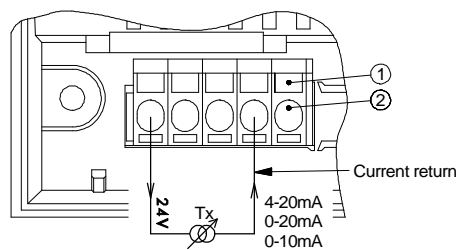

A 24V internal power supply is available to power external field transmitters.


INTELLIGENT PROCESS INDICATOR

Every effort has been taken to ensure the accuracy of this specification, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.


Stock code : 52-314-2250-02

Issue: 3

3.5.2 Current Measurement of an Externally Powered Loop

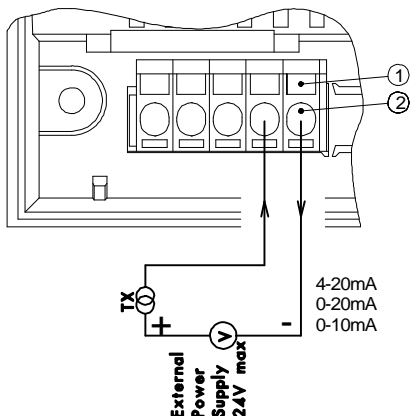

3.5.3 Voltage Connection

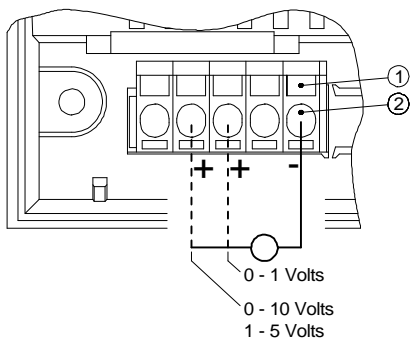

To make a connection: Insert small screwdriver blade into tension clamp orifice, (1) push and twist to deflect clamp into open position. Do not lever screwdriver thus forcing connector body sideways. Insert conductor tail sufficiently into (2) then release screwdriver. Ensure no loose wire strands protrude.

4.0 PROGRAMMING THE INSTRUMENT

The unit is a microprocessor based instrument enabling it to satisfy a variety of applications. All programming is available from the front panel or via a PC using the RS485 Modbus communications pod.

4.1 Programming Guide

The unit has three operating modes. These are :-

- RUN (DISPLAYS PROCESS VARIABLE)
- MENU
- EDIT

RUN is the principal mode of operation, which displays the Process Variable from which all other modes are accessed. The unit will always time-out back to this mode after one minute.

MENU mode provides access to the programmable parameters.


EDIT mode is entered from Menu Mode and allows the user to inspect and modify a parameter.

4.2 Key Definitions

All programming is done using the three front panel keys, A, B and C are shown to assist the tutorial.


CYCLE (A), SHIFT (B) and INC (C) keys are pressed singularly.

ESCAPE (A&B), ENTER (B&C) and CLEAR (A&C) are obtained by simultaneously pressing the two keys.

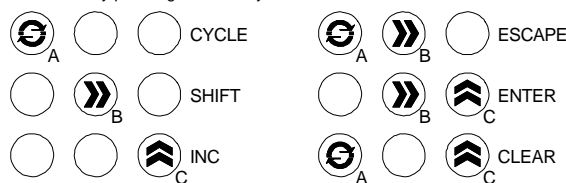

4.3 Entering Menu Mode

The Root Menu mode is accessed from "Run" by pressing ENTER (B&C) followed by CYCLE (A). The display will now show "InPt". In order to understand what this means, the following diagram shows where we are within the basic Root menu.

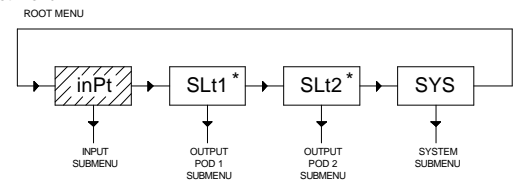

* Slot menus only appear when respective option pods are fitted.

4.3.1 Moving Around The Menu


You can browse through the Root menu by pressing CYCLE (A) which moves the menu position from left to right (after reaching SYS, the menu position wraps around to the start).

4.3.2 Entering A Submenu

To enter a submenu, first cycle around the Root menu until the required submenu is displayed. For the purposes of this tutorial press the CYCLE (A) key until InPt is displayed. Pressing SHIFT (B) enters the Input Submenu.

tYPE will now be displayed. The diagram shows our position in relation to other items in the menu.

Pressing CYCLE (A) moves left to right, wrapping around at the end. The unit alters items in the menu list depending upon settings made.

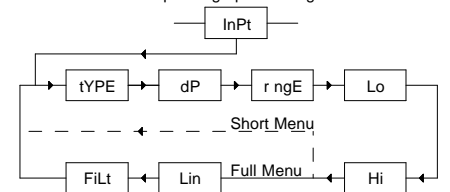


4.3.3 Editing A Parameter

The items displayed in the menu can either be submenus, parameters or numbers, most of the items in the Inputs menu are parameters which can be edited.

Press the **CYCLE (A)** key until tYPe is displayed, then press **SHIFT (B)**.

The current setting will now be shown flashing. This item is changed by pressing the **INC (C)** key.

The choice of options available is as follows:

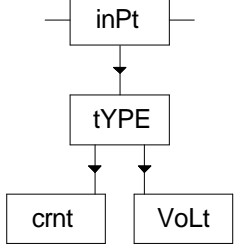

Press the **INC (C)** key until "crnt" is displayed.

Note that whilst the display is flashing, the option on the display has not been saved to memory. To select an option, the **ENTER** key sequence is used. Press **ENTER (B&C)**. The display will stop flashing momentarily before returning to Menu mode. The system automatically steps on to the next entry to speed the process of programming. This method of editing parameters is repeated throughout the menu structure.

4.3.4 Returning From Submenus

To return up from the inPt menu to the root menu wait for 1 minute or press the **ESCAPE (A&B)** key.

Pressing the **ESCAPE** key from our current position in the Inputs submenu takes us back to the Root menu. The menu position will automatically step to the next menu item, if no pods are fitted the unit will show SYS, if pods are fitted SLT1 or SLT2 will be shown.

The Root menu, as its name suggests is not a submenu. Pressing the **ESCAPE (A&B)** key sequence whilst in the Root menu will take the user out of Menu mode and into Run mode. Thus the process variable will be shown on the display.

Refer to section 5.2 if an error code is shown after programming in menu mode.

4.4 The Menus

4.4.1 The INPt (INPUT) Submenu

The INPt submenu is used to program all the characteristics of the input sensor and any signal conditioning that may be required. The selection of an option in the list may affect items further down. Therefore, during programming, the user should start at the top of the menu and work down, to avoid setting an option which may later become obsolete. Short menu only items shown in bold.

TITLE	OPTIONS	DETAIL
tYPe	crnt, VoLt	Set Current or Voltage
dP	888.8, 88.88, 8.888, 8888	Defines decimal point location
rngE	4-20, 0-20, 0-10	mA range setting, only for Current input
rngE	1-5, 0-1, 0-10	Voltage setting, only for Voltage input
Lo	000.0	Low engineering range, -999 to 9999
Hi	100.0	High engineering range, -999 to 9999
Lin	nonE, Sqrt, cust	Linearity: none, square root or custom *
Filt	nonE, 2.5s, 10s, Adaptive	Input filtering or smoothing
uSEr	in 0.....in 9 out 0.....out 9	

User Linearisation

Selecting "cuSt" in the "Lin" parameter allows access to the "uSEr" submenu. Within this menu, 10 points may be programmed to relate electrical input to engineering value. These points are represented by "IN" and "OUT" entries within the menu, where "IN" are the electrical inputs and "OUT" the resultant engineering value. The entries for the electrical input must progressively increase. Inserting an electrical value less than the previous electrical value will mark the end of the interpolation. Any value falling outside the bounds specified by the table will be regarded as out of bounds and under or over range will be displayed.

Peak/Valley Display

The max and min process variables measured since switch-on or last reset are continuously calculated within the instrument. To view peak, press "shift", to view valley, press "INC". Peak and Valley can be reset by pressing "CYCLE",

and "INC" simultaneously when "cLEn" is set to "ON" within the "SYS" menu

4.4.2 The Sys (System) Submenu

TITLE	OPTIONS	DETAIL
LiSt	FuLL, SHrt	Selects full or short menu
cLEn	oFF, on	Clear enable (option pods)
SPEn	oFF, on	Setpoint enable (option pods)
Adel	oFF, 2,5,10,20,60,120,240	Power-up alarm delay
PASS	4 digit passcode	Modify any password code
oFFS	User defined offset	Take care when replacing sensor

Refer to section 7.0 for SLt menu structures.

5.0 OPERATION

5.1 Run Mode Operation

The normal display shown in this mode is the process variable.

KEYPRESS	ACTION
CYCLE (A)	View setpoints (Adjust value if SPEn enabled)
CLEAR (A&C)	Clear latched alarms (cLEn enabled)

5.2 Failure Modes

If the input is outside the measuring range of the instrument, the following error messages will be shown.

Input	Display	Condition
Over range *	----	PV > 110% Eng. Span
Under range *	----	PV < Eng. Low - (1.25% Eng. Span)

* If the instrument is programmed with a custom linearisation the instrument will display over or under when the input falls outside the linearisation bounds. If a small amount of valid signal over/under range is required, this must be built into the linearisation table.

6.0 SPECIFICATION @20 °C

6.1 Process Specification

DC Voltage	Range	0-1 volts / 1-5 volts / 0-10 volts
Accuracy		0.05% FS
Thermal Drift	Zero	0.1µV / °C
	Span	100 ppm / °C
DC Current	Range	0-20mA / 4-20mA / 0-10mA
Input Impedance		47 ohm (current) 1 Mohm (voltage)
Accuracy		0.05% FS
Thermal Drift		100 ppm / °C
Excitation		24V ±5% @ 50 mA

6.2 General Specification @ 20 °C

Input/Output Isolation	500VAC rms (galvanically isolated)
Update time	250 mS maximum
Time Constant (Filter off)	<1 second (to 63% of final value)
Filter Factor	Off, 2 Seconds, 10 Seconds or Adaptive
Warm-up time	2 minutes to full accuracy
Display Range	-999 to 9999
Power Supply	S1 90-253 VAC 50/60 Hz S2 20-35 VDC
Power Consumption	6VA Maximum (options fitted)

Environmental

Sealing to PANEL	IP65
Ambient Operating Range - Non UL	-30 to +60 °C
UL:	-30 to +40 °C
Ambient Storage Temperature	-50 to +85 °C
Ambient Humidity Range	10 to 90% RH non condensing

Approvals

EMC	BS EN61326
Electrical Safety	BS EN61010-1

Environmental Approvals for Tension Clamp Terminals

Low Temperature	IEC 68-2-1
Dry Heat	IEC 512-6-9
Damp Heat	IEC 512-6-3

Damp Heat cyclical	IEC 68-2-30
Salt Spray	IEC 512-6-6
Sulphur Dioxide	IEC 68-2-46
Hydrogen Sulphide	IEC 68-2-16
Gas Tightness	IEC 512-Pr.11n

7.0 OPTION PODS

7.0.1 Installing Pods


Power must be removed from unit before adding/removing a pod.

Slot 1 (alarm 1 and 2) should be positioned on the left side of the unit looking from the front to correspond to front panel alarm indicator, slot 2 (alarm 3 and 4) is positioned on the right.

To install an option pod, slide back the cover to its next engaging position and push the pod connection within the mating connector.

To remove an option pod, disengage the supporting latch situated beneath the pod by pushing the back cover forward, the pod can then be lifted away from the instrument connector.

7.1 Dual Relay Pod. POD-3000/02

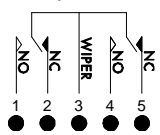


The relay pod has two "change over" relays with a common wiper.

NC = Normally closed
NO = Normally open

7.1.1 SLT1, SLT2 (Relay Pod) Submenu


Each relay can be set as high or low alarm independently.

TITLE	OPTIONS	DETAIL
AL 1	Hi, Lo	Alarm action
SEt1	User defined	PV at which the alarm triggers
dEL1	oFF,2,5,10,20,60,120,240	Alarm delay (seconds)
HYS1	User defined	Hysteresis band (see below)
LA1	oFF, on	Sets latching to on or off
inUI	oFF, on	Invert relay operation
Continues through for Relays 2 - 4 (when fitted).		

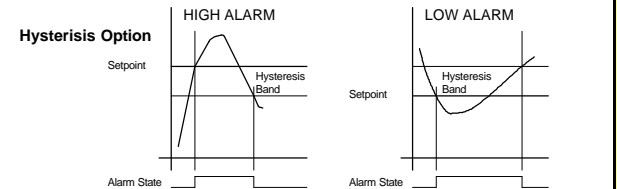

7.1.2 Relay Specification

	AC	DC
Maximum Load - Non UL:	7A @ 250V	7A @ 30V
- UL:	2A @ 250V	2A @ 30V
Maximum Power	1750VA	210W
Maximum Switching	250V	125V
Electrical Life	10 ⁵ operations at rated load	
Mechanical Life	50 Million operations	

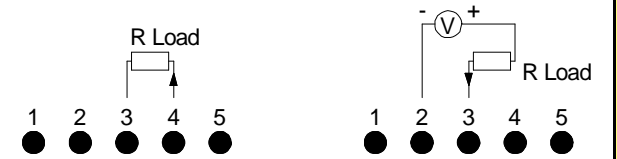

7.2 Isolated 4-20mA Re-transmission Pod. POD-3000/03

The re-transmission pod (when fitted) is designed to provide 0-10mA, 0-20mA or 4-20mA output in active or passive modes. The output can be any portion of the display. The pod can be used in two modes:

Active (Source)	Passive (Sink)
Max RLoad = 1K	RLoad ≤ (V-2) K Ohm 22 And Vmax = 30V

Note: Only one Re-transmission pod can be fitted.

7.2.1 SLT1, SLT2 (Re-transmission Pod) Submenu


TITLE	OPTIONS	DETAIL
Lo 1	User defined	Low span range
Hi 1	User defined	High span range
SPAn	4-20mA, 0-20mA, 0-10mA	User defined output current

7.2.2 Re-Transmission Pod Specification

Minimum Current Output	> 0mA
Maximum Current Output	< 23mA
Accuracy	0.07% or 5µA, which ever is greater
Maximum External Power Supply	30V (passive mode)
Voltage Effect	0.2µA / V
Ripple Current	< 3µA
Isolation	500V AC
Temperature Stability	1µA / °C

7.3 Modbus Serial Communications Pod. POD-3000/05

The diagram below shows a PC connected to Modbus pods.

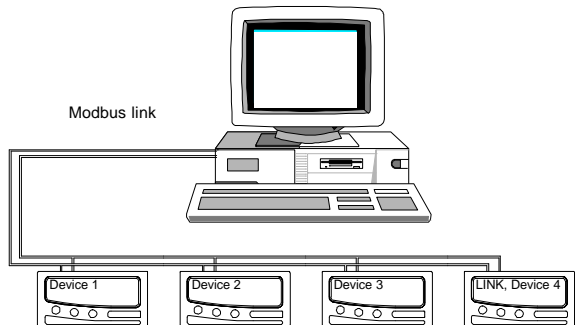


7.3.1 SLT1, SLT2 (Communications) Submenu

TITLE	OPTIONS	DETAIL
Addr	User defined	Instrument device number
baud	9.6, 19.2	User selected baud rate
Line	2, 4	4 Wire or 2 wire half duplex RS 485

7.3.2 Comms Pod Specification

Configuration, system I/O and display unit	PC communication.
Physical Layer	4 wire or 2 wire half duplex RS485
Isolation	500V AC
Maximum Fan out	32 units
Software Baud Rate	19,200 or 9,600
Protocol	Modbus RTU format

* Optional link

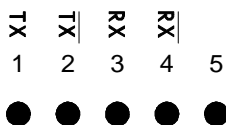

* Connection of the link connects a 100 ohm termination resistor across pins 4 and 5. This resistor should only be selected for the instrument furthest away from the host.

Full details of the modbus protocol are supplied separately with the pod.

8.0 MECHANICAL DETAIL

Material	ABS/PC
Weight	200g
Flammability	IEC707 FV0
Pod weight	40g typical
Panel cutout	92mm x 45mm

